

Be Part of the Buzz

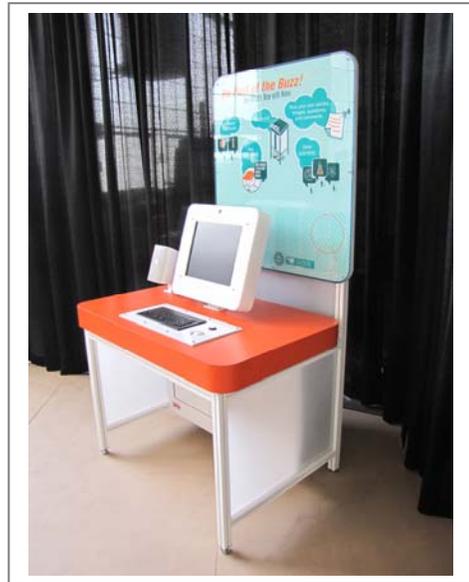


Exhibit Description:

A computer based component.

Exhibit Interface:

A computer based component.

Exhibit Components:

The following lists of components combine to make the exhibit.

Base Cabinet:

- Weighing, 100 lbs.
- Dimension, 57" H x 66" W x 32"D

Graphic Panel:

- Weighing, 20lbs.
 - Dimension, 34"H x 38" W x 2"D
-

Exhibit Specifications

Dimensions:


- Exhibit Dimensions:
 - 79"H x 66"W x 31"D
- Exhibit Foot Print:
 - 66"W x 31"D
- Exhibit Floor Space:
 - 72"W x 62.5"D

Power Requirements

- 110-volt, 15-amp.
 - Accessed through base cabinet of the exhibit

Internet

- Hard-line or wireless

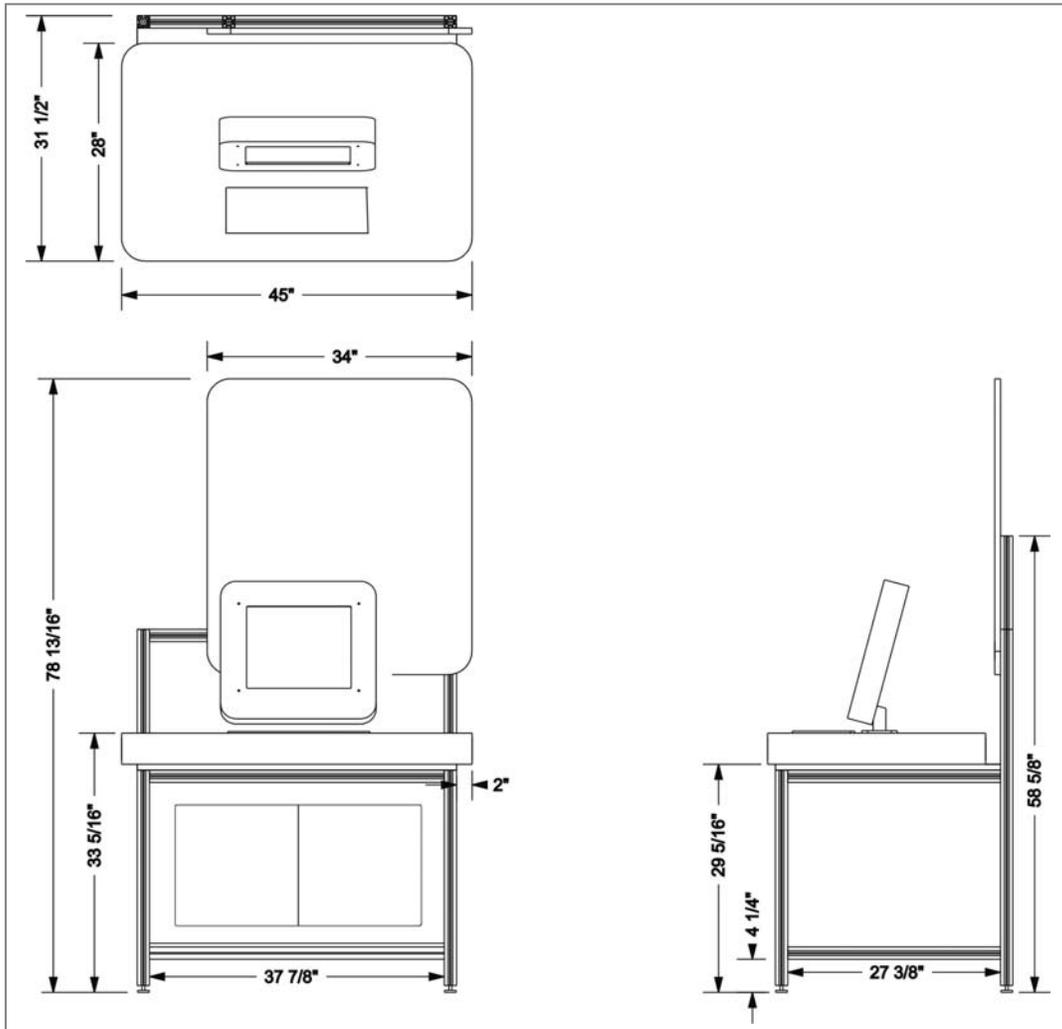

Tools and Hardware:

Tools and Hardware needed for installation, maintenance and repairs to the exhibits.

Key

- 415-A
 - To open base cabinet.

Cam Wrench

- Cam locks
 - Securing Side Monitor to exhibit frame
 - Securing exhibit frame

9/64" Allen Wrench

- All ¼ x 20 button head bolts
 - Securing the Graphic Panel to the exhibit frame

5/32" Allen Wrench

- Security screws
 - Securing all second surface graphic panels

3/32" Allen Wrench

- Machine screws that secure Side Monitor shroud

#2 Phillips Screwdriver

- Machine screws
 - Securing Side Monitor shroud back panel

6" Crescent Wrench


- To adjust leveling feet

Parts:

Parts needed for installation, maintenance and repairs to the exhibit.

- Monitor
 - 17" Happ, 49-2603-30
 - Computer
- Computer
- Speaker

Media:

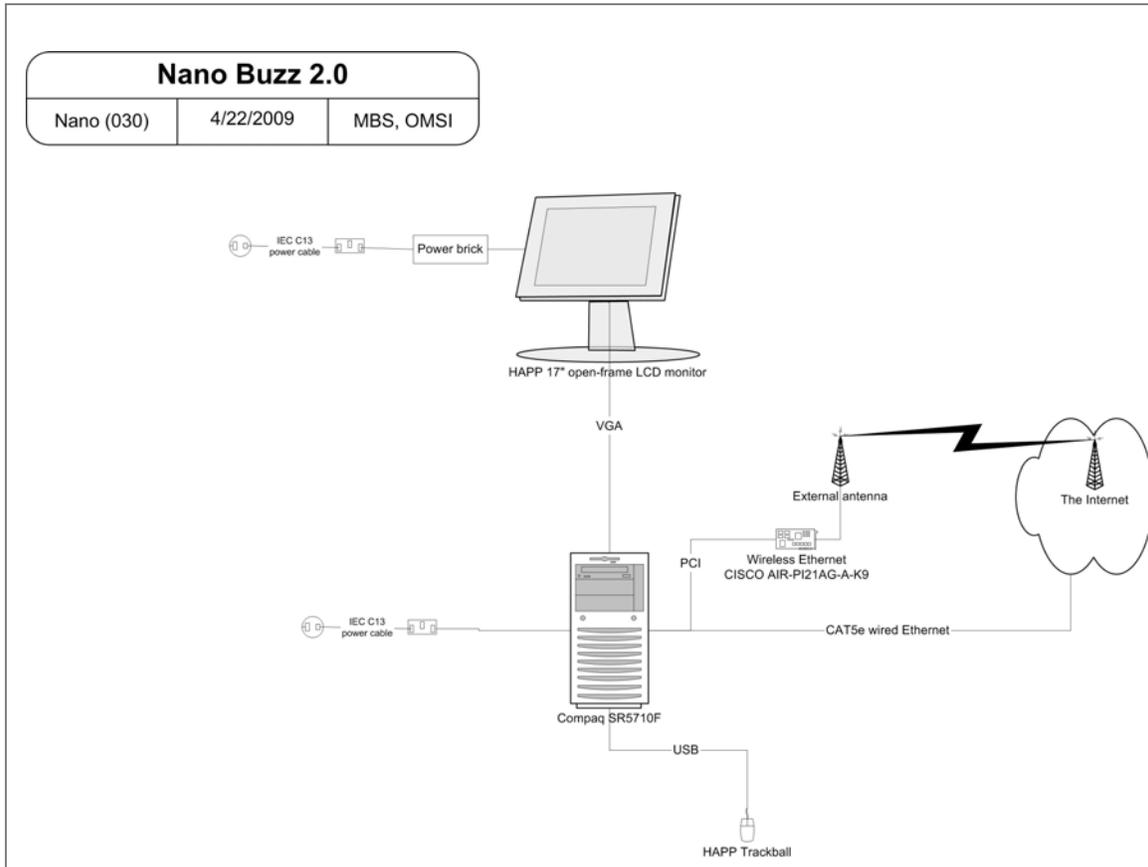

Programming


How to Exit SiteKiosk protected mode:

- If a full keyboard is plugged in
 - Escape SiteKiosk – Ctrl + Shift + Alt + L
 - Password – lloyd
 - **“Close SiteKiosk”** or **“Logoff User”** to make any changes to the system. A message will say **“Attention: Settings will now be reset, Do you want to proceed?”** click on **“yes”**.
- If a full keyboard is not plugged in:
 - Plug in a full keyboard and press the restart button on the computer, this will restart into the protected SiteKiosk mode.
- Follow full keyboard setup as listed above.

How to start SiteKiosk:


- Double-click on the SiteKiosk icon on the desktop
- If there are only three options select **“Customized”** then **“OK”**, otherwise skip to the next step.
- Select **“Run SiteKiosk” automatically at Windows startup (auto start)**.
- Uncheck **“Auto start without Shell Replacement”**
- Do not check **“Disable any keyboard input during start up”**
- Check **“Do not display quick start dialog box at startup”**
- Check **“Log on automatically at system startup”**
- Set the **“User”** pull-down to **“Exhibits”**
- The password should be **“lloyd”**

Service Access

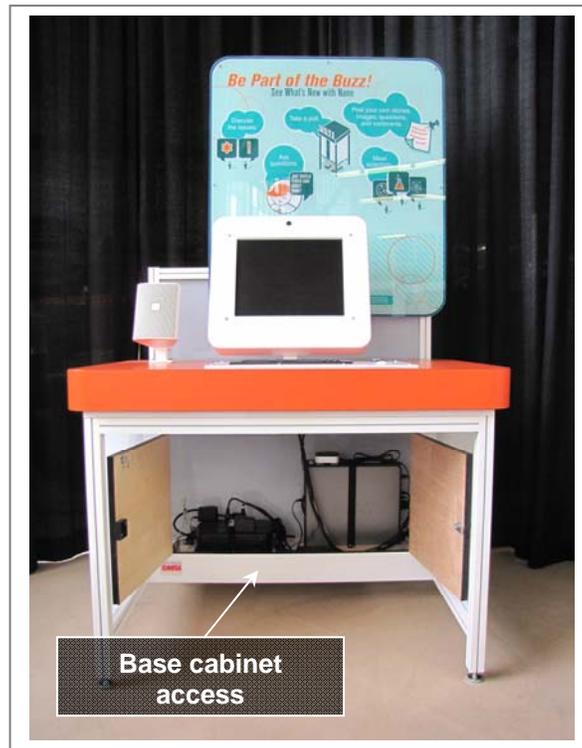

Base Cabinet access

- Accessed with a 415-A key
- Contains
 - Power Outlet Strip
 - Computer
 - Audio amplifier

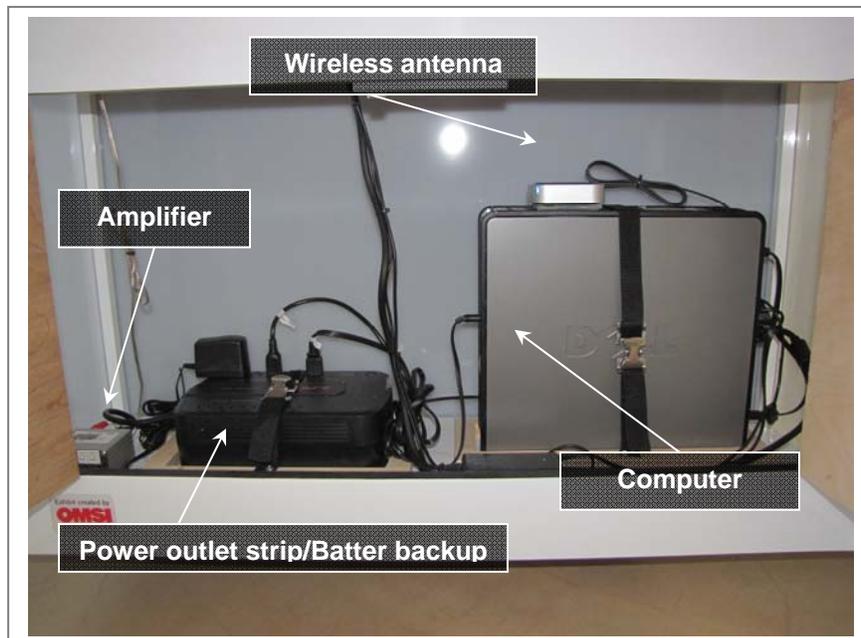

Trouble-Shooting

Interactive:

- No Picture on Interactive Monitor.
 - Ensure there is power to the exhibit.
 - Ensure power strip is switched to the “ON” position.
 - Check to ensure all power plugs are connected to power strip and to the back of the Monitor.
 - Check to ensure source plug is connected to the computer and to the back of the Monitor.
- ➔ **If the above conditions are met the computer, program, or monitor may be faulty, consult exhibit technician.**

Audio:

- No Sound
 - Check to ensure all plugs are securely connected to the Amplifier.
 - Check to ensure volume is set correctly on the audio amplifier
- ➔ **If the above conditions are met the speaker, or amplifier may be faulty, consult exhibit technician.**